


Rotate the securing plate to expose the pin in the shaft of the handle.

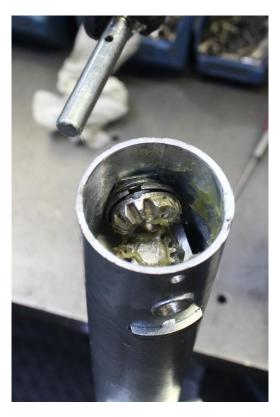

When the pin is exposed rotate the handle to the upright position (shown with the red arrow) then hit the pin with a punch tool to drive it out.



Once the pin is out you can pull the shaft out as shown in the picture.



When the shaft is out you can take out the parts from the assembly using pliers or your fingers.

The assembling of the part is the same process in reverse, put the gears and washers back in the correct order, then put the handle back in, punch the pin through the sahft then rotate and secure the securing plate.